

Cookers Fresh Oil Storage Unit

These instructions are designed for the Cookers Bulk Oil System equipment only.

Take a minute to familiarise yourself with Cookers Fresh Oil storage unit.



1. Wheel in unit and Plug in extension cord at rear
2. To access the hose to pump, lift front lid and pull out pin to open door
3. Before filling, recirculate oil in the storage unit open filler cap and place nozzle into top
Then turn power on inside unit and squeeze for one minute and release...(PAUSE)
4. Now ready to fill deep fryer by pointing nozzle into fryer and squeeze
5. When finished turn off power at unit and wall
6. Recoil hose back into front with nozzle upwards and return pin to close front door.
7. Unplug cord and return unit to storage, ready for Cookers to refill with fresh oil.

